
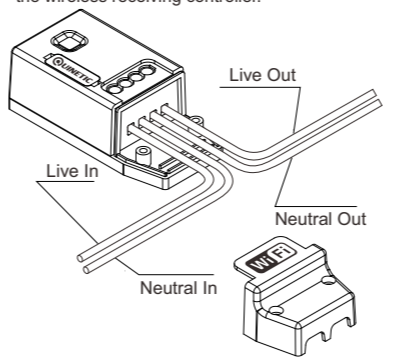


 
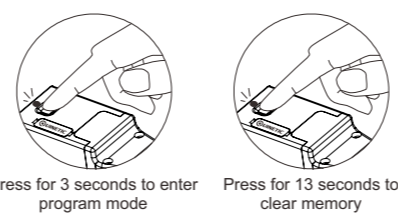
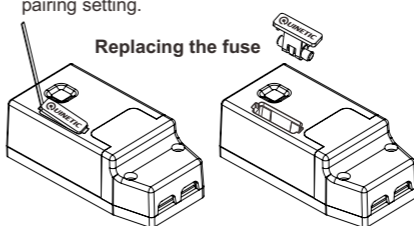
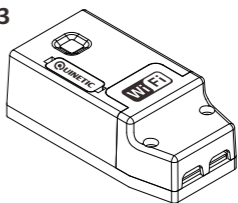
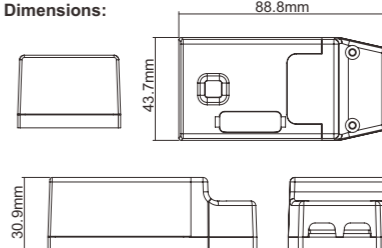



# KRW03

## 5A WiFi Controller Instructions 80\*60mm

 <p><b>KINETIC</b> 5A WiFi Controller for Quinetic Wireless Switch</p> <p>Installation Instructions</p> <p>KRW03</p> <p>Read all instructions before installation</p>	<p><b>Specifications</b></p> <p><b>WiFi Wireless Receiving Controller Technical Specifications:</b></p> <p>Product Code: KRW03 Voltage range: 100-240V 50/60Hz Working environment temperature: -25°C - 50°C Control distance*: 80m(outdoor), 30m(indoor) Capacity: Up to 10 switches can be paired with one controller Control method: WiFi through Device APP (search "Kinetic Switch" in store) and pairing with Kinetic Wireless Switch (see instructions)</p> <p>Control Load: 5A Maximum Load: 450W LED &amp; 1000W other loads**</p> <p>*Distance comes from Kinetic laboratory test results. The actual distance in practical use might vary due to environmental difference.</p> <p>**Maximum load rating may vary depending on manufacturers specifications.</p>	<p><b>Wireless receiving controller installation</b></p> <ol style="list-style-type: none"> <li>1. Ensure that the power is turned off before installation.</li> <li>2. The wireless receiver/controller line input should be connected using live and neutral cable from mains.</li> <li>3. Output lines should be connected to load using cable rating suitable for 100-240V depending on voltage at site. (see diagram below).</li> <li>4. Use the double-sided adhesive tape or screw to fix the wireless receiving controller.</li> </ol>  <p>Wiring Instructions</p>	<p><b>Smart Device APP Download:</b></p> <p>The free Kinetic Switch App is required to operate your WiFi controller. Ensure your iOS / Android device is connected to the internet using a Wi-Fi network.</p> <p><b>Method 1:</b></p> <ol style="list-style-type: none"> <li>1. Open the App store/Google Play on your phone.</li> <li>2. Search for "Kinetic Switch" in the App store or Google Play.</li> <li>3. Download the Kinetic Switch App to your phone.</li> </ol>  <p><b>Method 2:</b> Or you can download the app using the QR codes below:</p>  <p>IOS                      Android</p>	<p><b>Device pairing***:</b></p> <p>The initial setup must be performed using your Wi-Fi network. Both the phone and the controller must connect to your network. Once it has been set up you can control your Wi-Fi device via Wi-Fi or 3G/4G from anywhere in the world.</p> <ol style="list-style-type: none"> <li>1. After downloading the APP follow the prompts to register the account.</li> <li>2. Turn on power to the controller and follow the steps on the APP to set the receiver to rapidly blink.</li> <li>3. Follow the prompts to select the controller model for quick pairing.</li> </ol>  <p><b>Using Amazon Alexa/Google Home to control your WiFi Controller</b></p> <p>Note: We would recommend naming the devices in your Kinetic Switch app something that is easy for Alexa or Google Home to understand.</p>
---	--	--	---	--

<p>In order to integrate the Kinetic Switch app with Amazon Alexa/Google Home you need:</p> <ol style="list-style-type: none"> <li>1) Amazon Alexa APP / Google Home APP</li> <li>2) Amazon Alexa / Google Home account (users need to register their own account)</li> <li>3) Echo, Echo Dot, Tap or other Amazon voice-operated devices.</li> <li>4) Google Home, Google Home Mini or other Google voice-operated devices.</li> </ol> <p><b>Enable Smart Life skill/action in your Alexa / Google Home APP</b></p> <p>Search for "Smart Life" skill and add it to the Alexa APP "Smart Home" skills. For Google Home search for "Smart Life" action and add it to Home Control. Enable the skill/action in your Alexa/Google APP and input the name and password used to register the Kinetic switch APP to link it with Alexa/Google APP.</p> <p>Voice control can be used now to control the Wifi device such as follows: "Alexa/Ok Google, turn on/off [kitchen light]" "Alexa/Ok Google, turn on [phone charger]".</p> <p><b>WiFi controller switch pairing method*:</b></p> <p>Wireless Kinetic energy switch and wireless receiving controller can be paired with any combination: a controller can be controlled by a maximum of 10 separate switches, a switch can</p>	<p>pair an unlimited number of controllers. The range of a switch may also be extended by putting the controller in to the " Bridging Mode".</p> <p><b>Code pairing steps:</b></p> <ol style="list-style-type: none"> <li>1. Press the function button for 3 seconds and the indicator light begins to flash slowly. Release the button to enter the single pairing state.</li> <li>2. Press the wireless kinetic energy switch and the indicator light of the controller will go out, which means that the pairing is successful.</li> <li>3. If you need to add more switches to the same controller please repeat the above process; each controller can store up to 10 switches, pairing in formation.</li> <li>4. Single, double and triple switches follow the same pairing method.</li> <li>5. In order to put the controller in to bridging mode press the function button for 7 seconds. The indicator light will pulse continuously to indicate a successful "bridge".</li> <li>6. If the controller indicator light continues to pulse the controller will still function normally even if used with a single switch.</li> <li>7. To remove the controller stored pairing information press function button for 13 seconds until the indicator light goes out - the pairing information will be cleared.</li> </ol>	 <p>Press for 3 seconds to enter program mode      Press for 13 seconds to clear memory</p> <p><b>Precautions:</b></p> <ol style="list-style-type: none"> <li>1. The wiring must be done in accordance with the method of installation illustrated.</li> <li>2. Please note the maximum loading of an individual controller. Exceeding this maximum will result in blowing the fuse.</li> <li>3. Do not short-circuit, otherwise it will cause permanent damage to the receiving controller.</li> <li>4. The controller will remain "OFF" after a power cut, saving energy, reducing fire risk and protecting your appliances.</li> <li>5. Damage caused by incorrect installation and operation are not covered under warranty.</li> </ol>	<p><b>Troubleshooting:</b></p> <ol style="list-style-type: none"> <li>1. If pairing does not work first check if the indicator is lit. Re-pair in case the pair is lost after power failure.</li> <li>2. If the receiver does not respond check the LED indicator. If this does not light check the power supply, if present the fuse may need replacing (see below)             <ul style="list-style-type: none"> <li>- Turn power off and remove fuse as shown below.</li> <li>- Replace with a fuse of the same specification and put it back in the controller.</li> <li>- Turn the power back on and press the function button to check LED lights.</li> <li>- Replacing the fuse does not affect the original pairing setting.</li> </ul> </li> </ol>  <p>Replacing the fuse</p>	<p><b>5A WiFi Controller for Kinetic Wireless Switch</b></p> <p><b>KRW03</b></p>  <p><b>Dimensions:</b></p>  
--	--	--	--	--