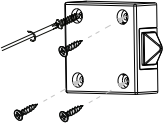 
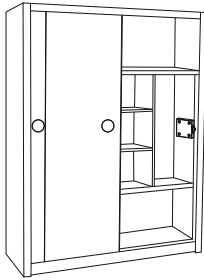 
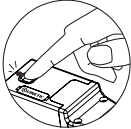 
 
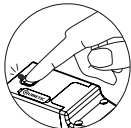 
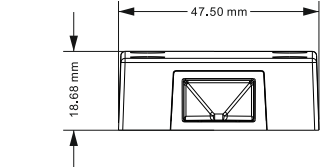 
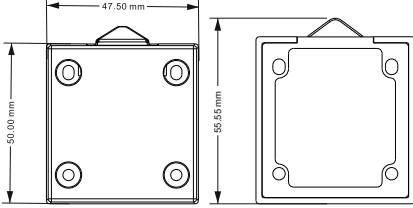 



# KDSB/W

## Wireless Kinetic Door Switch

 <p style="font-size: 1.2em; font-weight: bold;">KDSB/W</p> <p style="font-weight: bold;">Wireless Door Switch</p> <p style="font-size: 0.8em;">Installation Instructions</p> <div style="display: flex; justify-content: space-around; margin-top: 10px;">       </div> <p style="font-size: 0.7em; margin-top: 5px;">Self Powered   No Radiation   No Maintenance   No Wiring   Durable   Cost Saving</p>	<p style="font-size: 0.8em;">Read instructions carefully before installation</p>  <p style="font-weight: bold; font-size: 1.1em;">Wireless Sliding Switch</p> 	<p><b>Specifications</b></p> <hr/> <p><b>Wireless Kinetic Door Switch</b></p> <p><b>Technical Parameters:</b></p> <p>Work Type: Push Type Button          Power Source: Micro energy acquisition and self generating (no battery required)          Number of Keys: 1 (1 gang)          Control Distance*: 25m (indoor)          Work Frequency: 433Hz          Work Environment Temperature: -20°C ~ 55°C          Control Method: Pairing with Kinetic Wireless Controller          Life Time: ≥100000 times          3 Year Warranty          Installation method: surface mounted with screws (not included).</p> <div style="text-align: center; margin-top: 10px;">  </div> <p style="font-size: 0.7em; margin-top: 10px;">* Distance comes from Kinetic laboratory test result. The actual distance in practical use might vary due to environmental difference.</p>
--	--	--

<p><b>Wireless Door Switch Operation:</b></p> <p>The Kinetic Wireless Door Switch can be installed inside wardrobes, cabinets, cupboards etc and is suitable for all door types. The KDS switches can be used with the standard Kinetic receiving controllers.</p> <p><b>Installation Instructions:</b></p> <ol style="list-style-type: none"> <li>1. Mount the wireless door switch on a flat surface using screws (not included).</li> </ol> <div style="display: flex; justify-content: space-around; margin-top: 10px;">   </div>	<p><b>Wireless Door Switch Pairing Method:</b></p> <ol style="list-style-type: none"> <li>1. Press the function button for 3 seconds and the indicator light begins to flash slowly. Then release the button.</li> </ol> <p style="text-align: center; font-size: 0.8em;">Press for 3 seconds to enter program mode</p> <div style="text-align: center; margin-top: 5px;">  </div> <ol style="list-style-type: none"> <li>2. Briefly press the wireless sliding door contact switch for 0.5 seconds.</li> </ol> <div style="text-align: center; margin-top: 5px;">  </div> <ol style="list-style-type: none"> <li>3. To unpair the device, press and hold the function button for 10 seconds.</li> </ol> <p style="text-align: center; font-size: 0.8em;">Press for 10 seconds to clear memory</p> <div style="text-align: center; margin-top: 5px;">  </div>	<p><b>Product dimensions:</b></p> <div style="text-align: center; margin-top: 10px;">  </div> <div style="text-align: center; margin-top: 10px;">  </div> <div style="text-align: right; margin-top: 20px;">  </div>
---	---	--