# KGDCL Wireless Grid Switch Click Scolmore Instructions 80\*60mm



## Wireless Grid Switch Operation:

The Kinetic wireless grid switch is compatible with Click Scolmore Minigrid system and can be installed into Click Minigrid mounting plates. It can be used with the standard or with the dimming Kinetic receiving controller (see controller instructions for more details about pairing).

#### **Dimming Operation:**

When paired with dimming Kinetic receiving controllers the grid switch can also dim the lights: Pressing the switch quickly will turn the light ON/OFF. Keep the switch pressed to dim the light to the desired level.

While the switch is pressed the lights will go down from 100%-0% and they will go up from 0-100% cyclically.

### Kinetic Switch and Controller Wireless System:

The wireless Kinetic grid switch and wireless receiving controller can be paired in any combination: a controller can be controlled by a maximum of 10 separate switches, a switch can pair with an unlimited number of controllers.

## Installation Instructions:

- Ensure the mounting box is securely fixed to the wall.
- 2. The Kinetic Click Scolmore Minigrid switch module
- is easily and quickly mounted onto Click Minigrid
- plates using screws for fixing (Fig.1). 3. Ensure no conductors into the mounting box are
- pinched or trapped.
- 4. If necessary the modules can be removed by unscrewing them out from the grid plate .
- Place the front plate over the assembly and secure it with the screws provided (Fig.2). Do not over tighten the screws, to do so may damage the front plate, fixing screws or grid frame.



